 

 
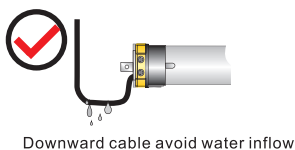

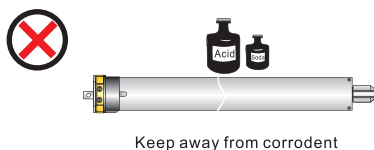


Standard Tubular Motor Manual

 

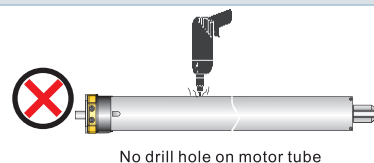


- Applied for motorized roller blinds, motorized awnings, motorized projection screen and garage etc;
- Composes by four parts: stator&rotor / brake / planet gearbox and limit switch;
- Small size, low weight, weak voice, precision journey positioning, easy installation;
- Motor have self-protection function when exact-hot, it will stop work when motor continuous working time is reaching 4-6mins and motor tube temperature is over 110°C, motor will stop running around 3-10mins, and get right working when recovered.




⚠ Notice

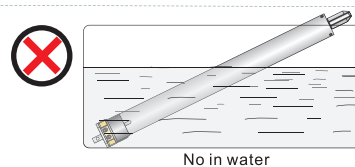




A Roller pipe preparation

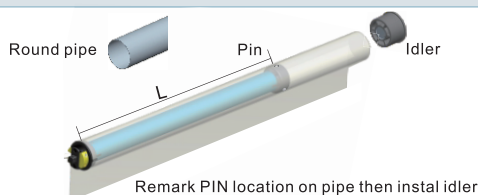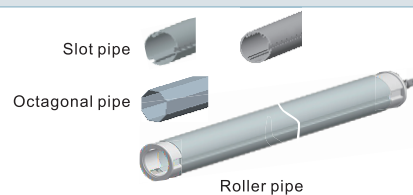



B Installation

 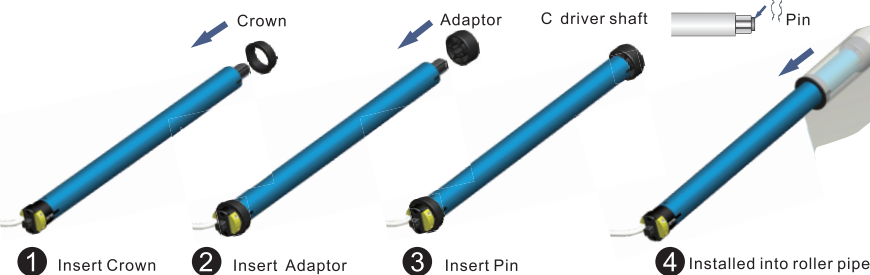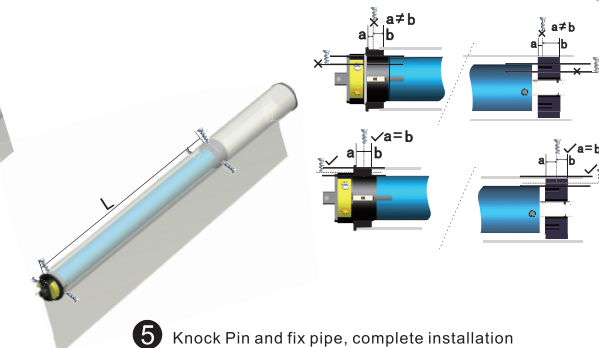


C Fix

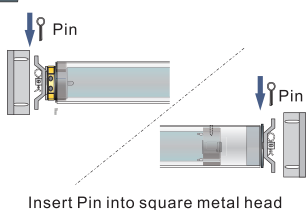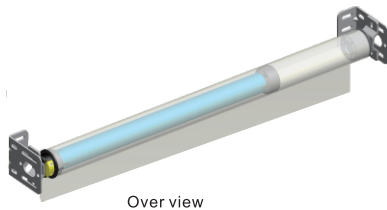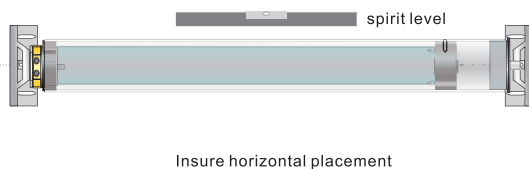


D Power wire and connection

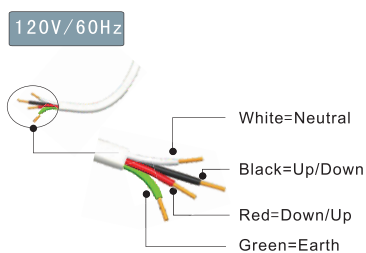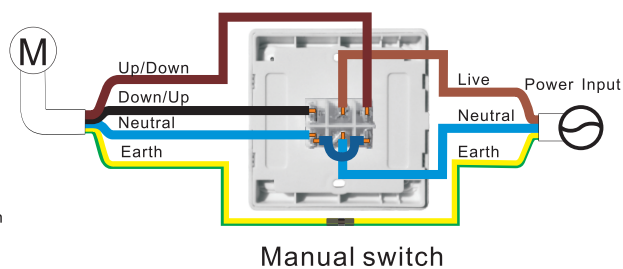


Drawing instruction

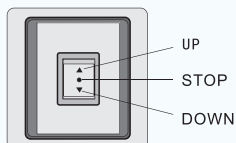

Manual switch

 

 Clockwise: Decrease journey
Anticlockwise: Increase journey




Forbid use electric screwdriver, only use regulator to adjust journey position and ensure adjust speed below 30rpm/min




A Blue line: UP/DOWN limit position
B Red line: New position after readjust

E Adjust Journey Position


Installation 1

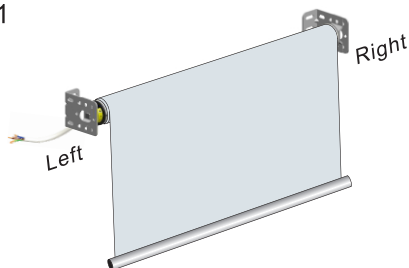

A. When motor limit head is left side, blinds outward rolling move

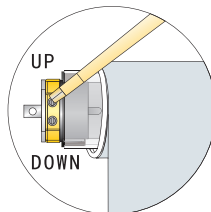


B. Adjust the UP adjusting knob to change UP limit position

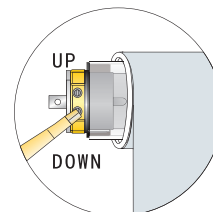


C. Adjust the DOWN adjusting knob to change DOWN limit position


Set UP limit position

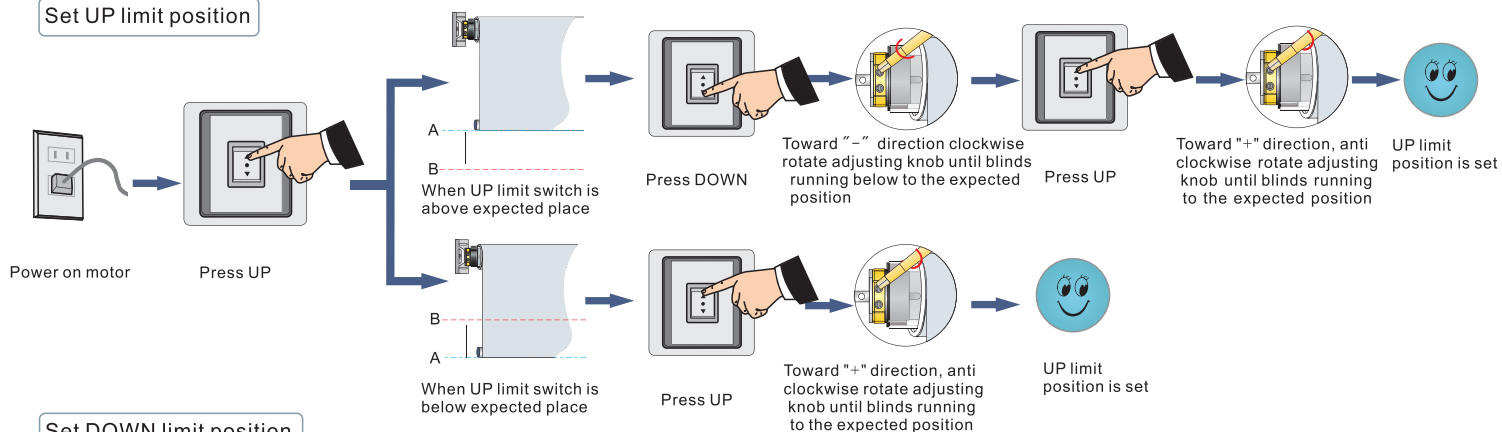


Set DOWN limit position

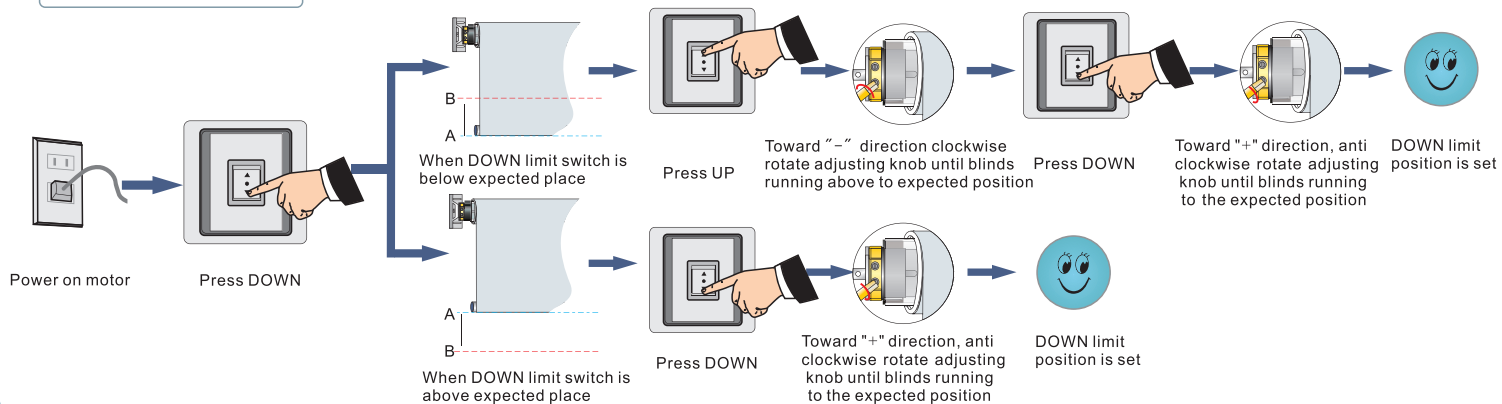


Installation 2

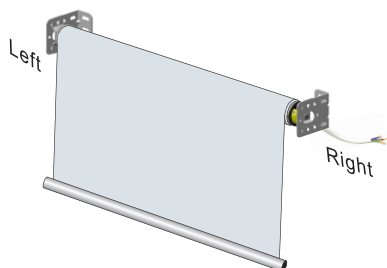

A. When motor limit head is right side, blinds outward rolling move

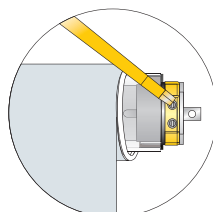


B. Adjust the UP adjusting knob to change UP limit position

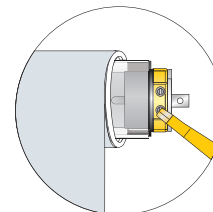


C. Adjust the DOWN adjusting knob to change DOWN limit position


Set UP limit position

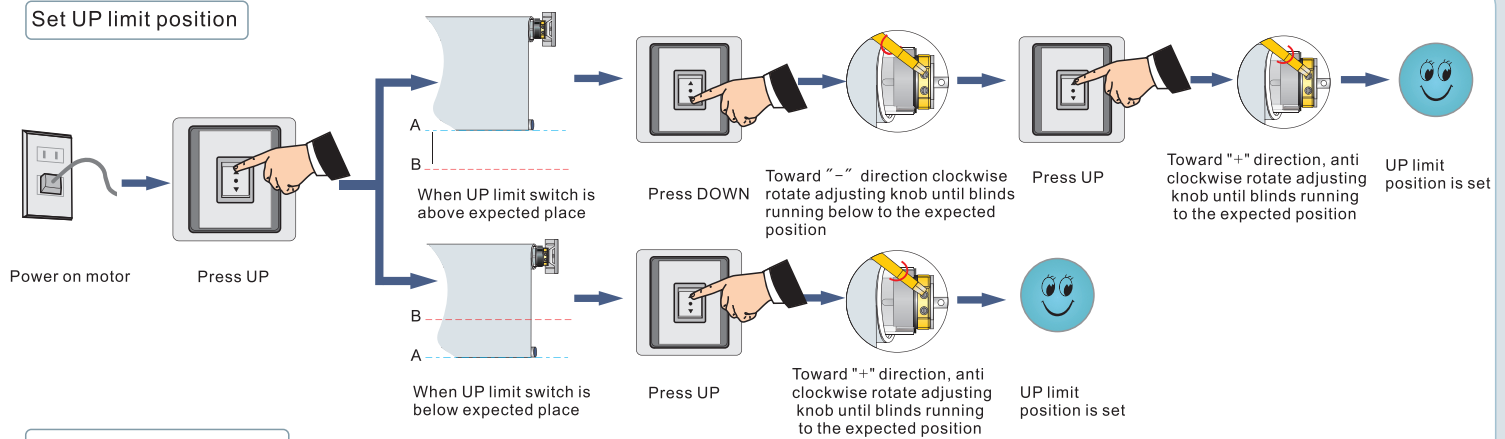


Set DOWN limit position

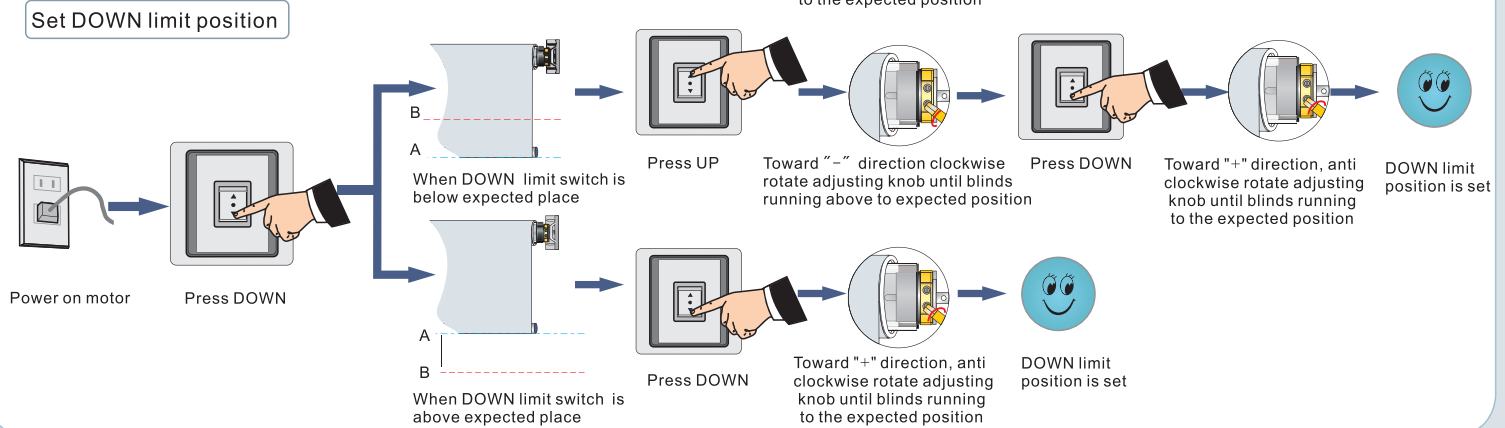


Installation 3

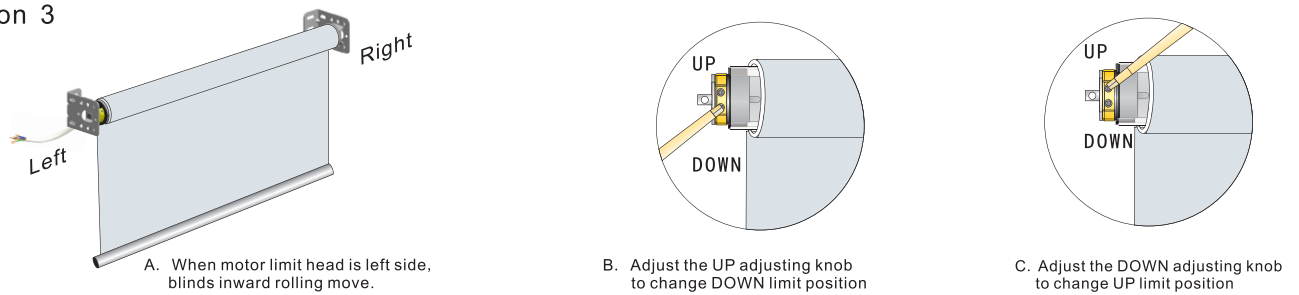


Set UP limit position

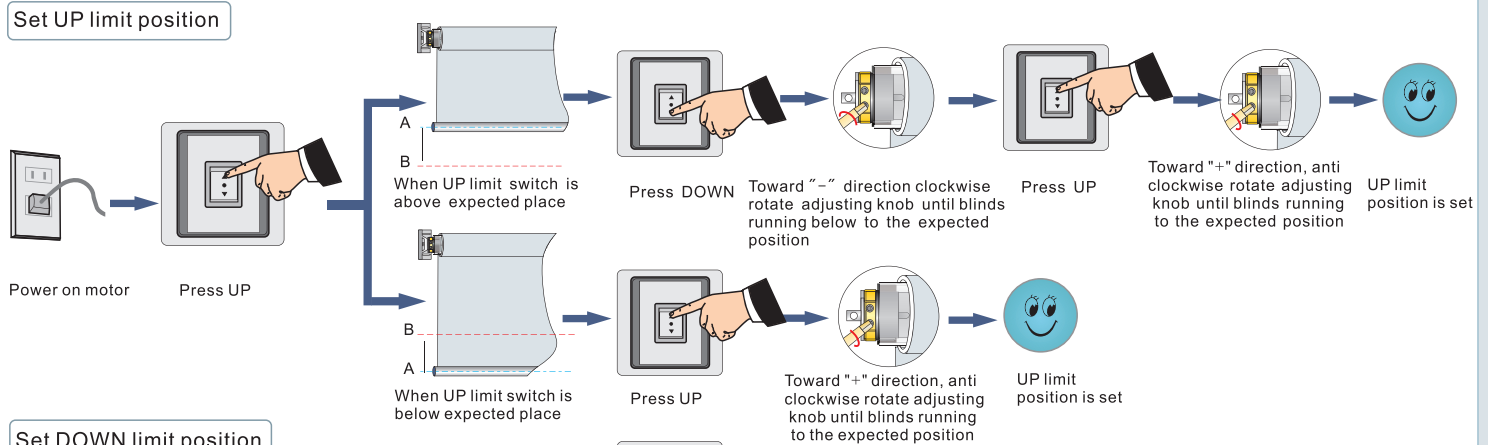


Set DOWN limit position

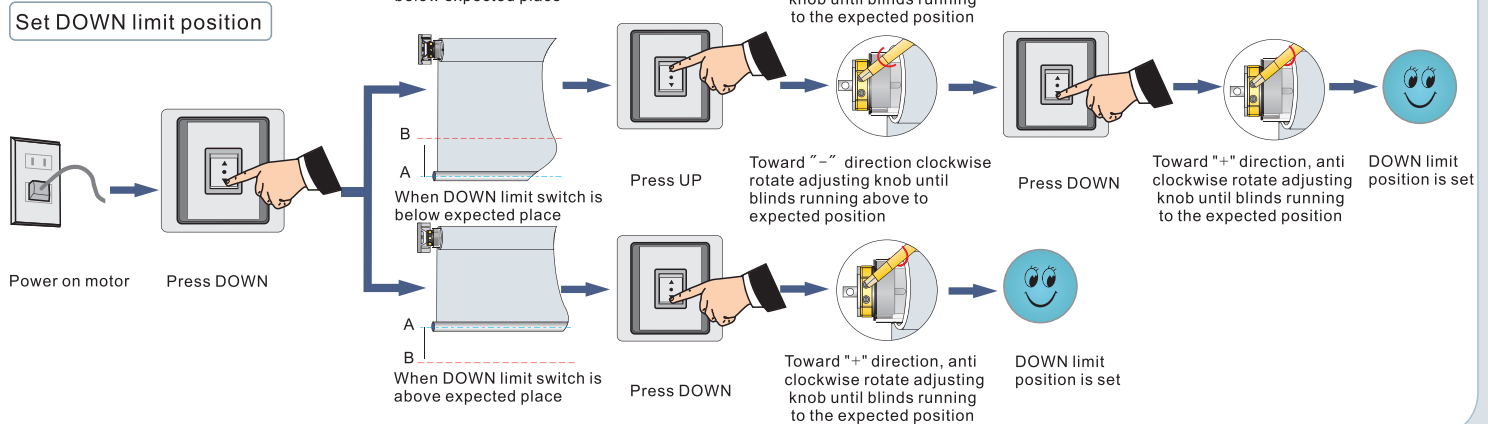


Installation 4

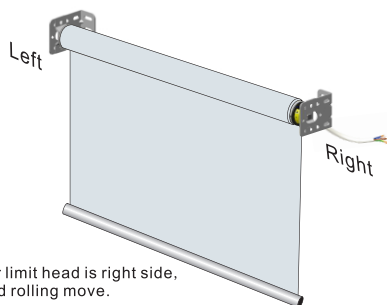

A. When motor limit head is right side, blinds inward rolling move.

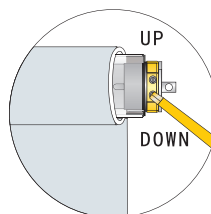


B. Adjust the UP adjusting knob to change DOWN limit position

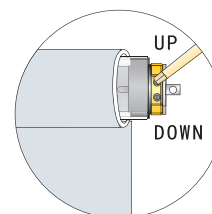


C. Adjust the DOWN adjusting knob to change UP limit position

Set UP limit position

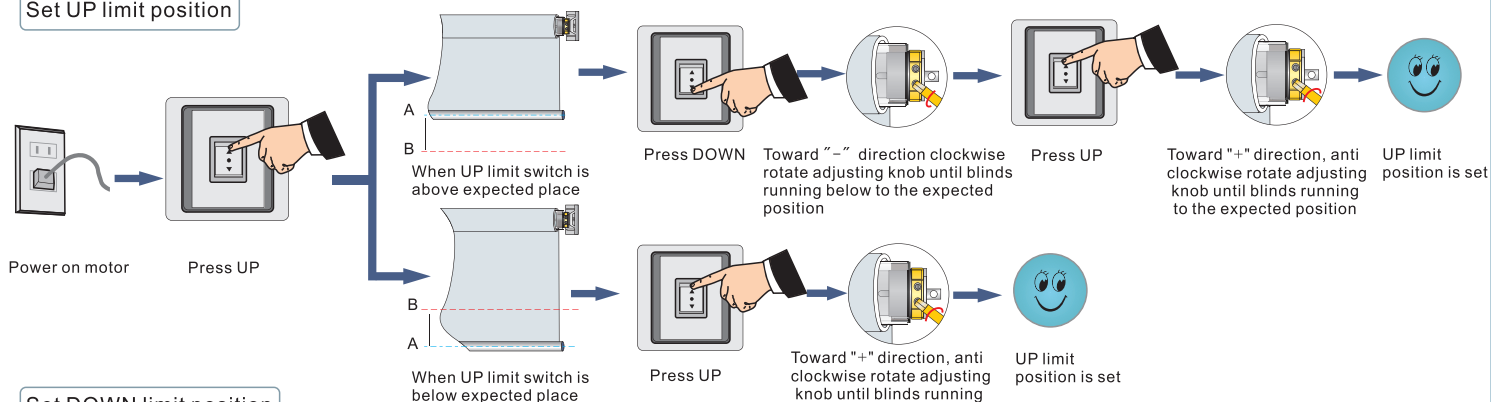

Set DOWN limit position

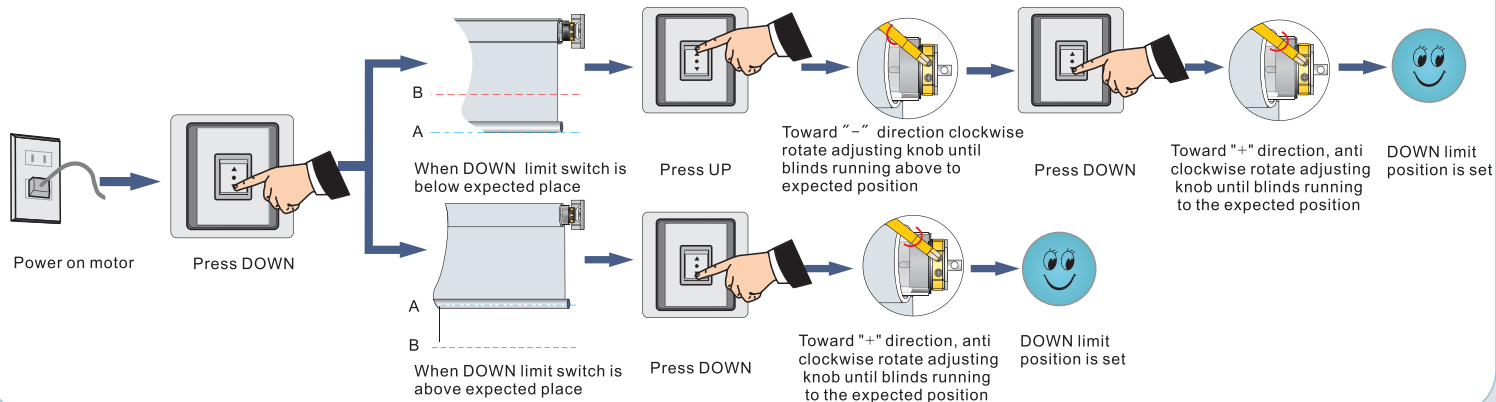


Remark: 25° angle limit motor (Picture2)

Adjust journey position by adjusting knob as Picture 1.

Set UP limit position : Corresponding above four installation, the same as set DOWN limit position


Set DOWN limit position : Corresponding above four installation, the same as set UP limit position

 Picture 1



Clockwise: Decrease journey
Anticlockwise: Increase journey

 Picture 2



25° angle limit motor

F Troubleshooting

Items	Problem	Matter	Shooting
1	After connecting with the power, the motor can not work or work slowly.	a. The voltage is wrong b. Over loading c. Wrong installation cause accessories stuck	a. Change to rated voltage b. Adjust loading until safety loading c. Check accessories and ensure the correct installation
2	After connecting with power, only one direction can work, the other direction can not work	The limit position of fail working is not opened	Rotate crown 1or 2 circles by hand on the opposite of motor current running direction
3	The motor stops running suddenly	a. The motor is in the mode of over-heat protection; precaution, over 130℃ b. Power is off c. Motor arrived at the limited position	a. when temperature drops(after about 3 minutes), the motor will come back to work again b. Once connecting with the power well, the motor will come back to work c. To check whether need to change limit position by adjusting knob
4	Press controller / switch's DOWN button, blinds UP running	Wrong wiring	Exchange the connection of black and blue wires.



In accordance with the provisions of the Directive of the European Parliament and of the Council 2012/19 / EU of 4 July 2012 on waste electrical and electronic equipment(WEEE), it is prohibited to place of used equipment together with other wastes, marked with crossed out wheeled bin symbol. The users are obliged to transfer their used equipment to a designated collection point for proper processing. The marking means, at the same time, that the equipment was put on the market after 13 August 2005. These legal obligations have been introduced to reduce the amount of waste generated from waste electrical and electronic equipment and to ensure an appropriate level of collection, recovery and recycling. The equipment does not contain any dangerous components, which would have any particularly negative impact on the environment and human health



A-OK hereby declares that the drive covered by these instructions, when marked for input voltage 230V 50Hz and used as intended according to these instructions, is in compliance with the essential requirements of Directives 2014/53/EU declaration of conformity detailing standards and specifications used and stating all particulars for identification of the drive, name and address of the person(s) authorised to compile the technical file and empowered to draw up the declaration including place and date of issue can be contacted A-OK headquarters customer service at 0752-5717888.