

The picture is AC127, AC123,
for other remote control pictures,
please refer to them specifically



1 GENERAL INFORMATION

Model	Power supply	Power	Range	Frequency	Operating temperature
AC125 AC126 AC127 AC123 AC133 AC140 AC141 AC136 AC156 AC157 AC159	Bateria ACR 2032	< 1W	120 metrów	433.92/868 MHz	-20°C~+55°C

Remote control available in USB-C rechargeable version

Learn button:



To access the button
LEARN, slide the cache from the
top to the bottom
back of the
remote, access the LEARN button
using
with a paperclip or an extractor pick.



Changing the battery:



Open the back of
the remote control
by sliding from top to
bottom the
back cover, the
battery (supplied) is
found inside.



Battery model
ACR2032



You can tell a low battery when the brightness of the remote control LED is dim.

2 PAIRING A FIRST REMOTE CONTROL




If you are using a multi-channel remote, make sure you are on the desired channel before pairing.

a • Via the motor power supply: _____



Start the engine
off

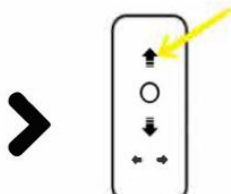


Hold the key
UP the remote
control until the blue
LED is solid



Start the engine
powered on without
releasing the key
RISE of the remote
control



The engine goes a-
back and forth, **release**
the UP button on the
remote control

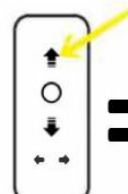

Press the key once
RISE of the remote control



The engine **goes back and forth** from
pairing confirmation



Your remote control is paired.

b


• Via the motor head (*If the motor has a PROG button*)



Press the button
PROG located
on the engine
head



The engine goes
back and forth

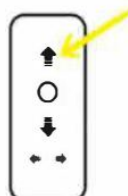

Press the UP button on the
remote control once




The engine makes a
back and forth of
pairing confirmation



Your remote control is paired.

3


REVERSING THE DIRECTION OF ENGINE ROTATION

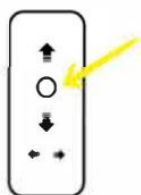

Hold the key
STOP on
the remote control
for 5 seconds



The engine goes
back and forth

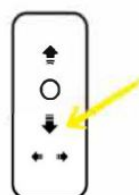

Press the DOWN
button on the remote control





The engine goes
back and forth




The direction of rotation is changed

4 DELETE A REMOTE CONTROL

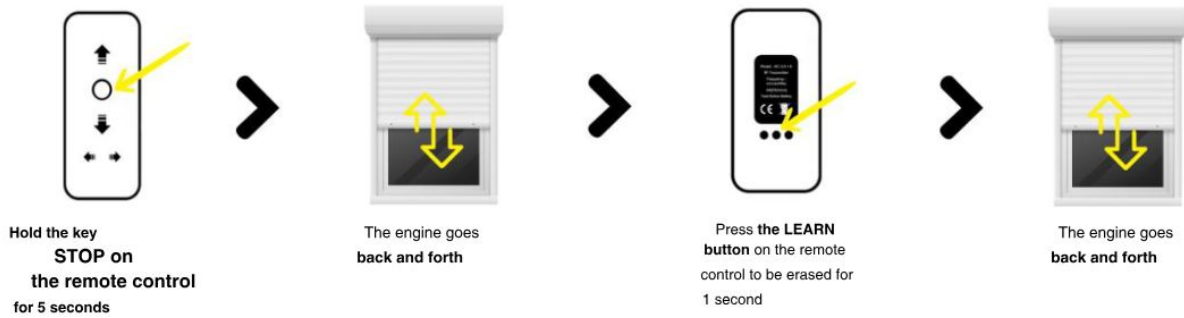

5 ADDING / COPYING A REMOTE CONTROL

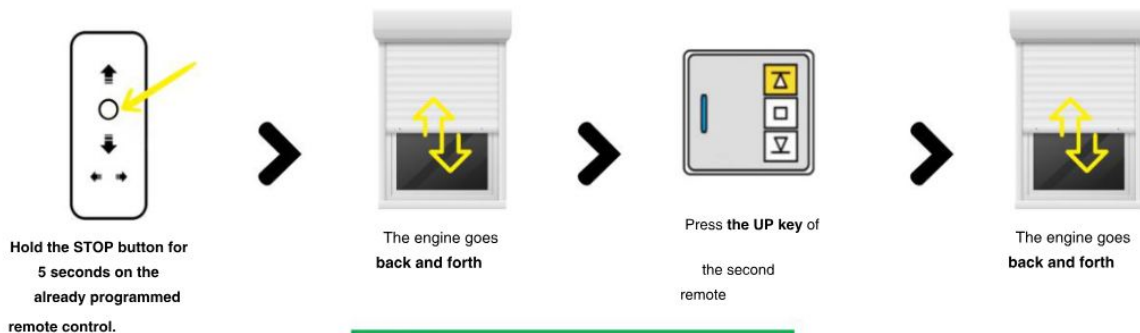

If you want to add a **general remote control**, you just need to copy a remote control as many times as there are shutters.



EXAMPLE: You have 3 shutters, each with an associated remote control. Get a 4th remote control that will be used as a general remote control, and make a copy from each of the 3 remote controls to the 4th.

(A copy does not erase the previous one, they are added together)



If you are using a multi-channel remote, make sure you are on the desired channel before copying.

6 BLOCK REMOTE CONTROL CHANNELS

a • Block channels:

If all of your channels are not being used, you can lock the remote to a specific number of channels. For example, you can lock a remote with 6 channels to only 4 channels by following these steps:



Position yourself on the channel on which you want to block the remote control, for example, here, channel 4 (so that only channels 1, 2, 3 and 4 are in operation).

When channel 4 is on, press the keys simultaneously

STOP + RIGHT

until channels 1, 2, 3 and 4 are lit simultaneously.



Once all 4 channels are turned on, your remote control is locked to 4 channels (out of 6 available), when you navigate using the left and right keys on the remote control, channels 5 and 6 are made unavailable.

b • Unblock channels



Using the left and right keys, position yourself so that channels 1, 2, 3 and 4 are lit simultaneously.

When channels 1, 2, 3 and 4 are on, press the STOP + RIGHT buttons simultaneously until all 6 channels are on.



Once all 6 channels are turned on, all 6 of your channels are available again. Navigate through the different channels using the left and right buttons on the remote control.



In accordance with the provisions of the Directive of the European Parliament and of the Council 2012/19 / EU of 4 July 2012 on waste electrical and electronic equipment(WEEE), it is prohibited to place of used equipment together with other wastes, marked with crossed out wheeled bin symbol. The users are obliged to transfer their used equipment to a designated collection point for proper processing. The marking means, at the same time, that the equipment was put on the market after 13 August 2005. These legal obligations have been introduced to reduce the amount of waste generated from waste electrical and electronic equipment and to ensure an appropriate level of collection, recovery and recycling. The equipment does not contain any dangerous components, which would have any particularly negative impact on the environment and human health.



A-OK hereby declares that the drive covered by these instructions, when marked for input voltage 3V and used as intended according to these instructions, is in compliance with the essential requirements of Directives 2014/53/EU declaration of conformity detailing standards and specifications used and stating all particulars for identification of the drive, name and address of the person(s) authorised to compile the technical file and empowered to draw up the declaration including place and date of issue can be contacted A-OK headquarters customer service at 0752-5717888.

Hinweis: Abbildung AC127,
AC123. Weitere Abbildungen
der Fernbedienung finden Sie
dort



1 ALLGEMEINE INFORMATIONEN

Modell	Stromversorgung	Leistung	Reichweite	Frequenz	Betriebstemperatur
AC125 AC126 AC127 AC123 AC133 AC140 AC141 AC136 AC156 AC157 AC159	Batterie ACR 2032	< 1W	120 Meter	433.92/868 MHz	-20°C bis +55°C

Fernbedienung auch als wiederaufladbare USB-C-Version erhältlich

Lerntaste



Um auf die Lerntaste zuzugreifen,
schieben Sie die Abdeckung von
oben nach unten auf die Fernbedi-
enung.

Verwenden Sie dazu eine Büroklam-
mer oder einen Auszieher.



Batteriewechsel:



Öffnen Sie die Rückseite der Fernbe-
dienung,

indem Sie die Abdeckung von oben
nach unten schieben.

Die mitgelieferte Batterie befindet
sich im Inneren.



Batteriemodell
ACR2032



Eine schwache Batterie erkennen Sie daran, dass die LED der
Fernbedienung schwach leuchtet.

2 KOPPELN DER ERSTEN FERNBEDIENUNG



Wenn Sie eine Mehrkanal-Fernbedienung verwenden, stellen Sie vor dem Koppeln sicher, dass Sie den gewünschten Kanal ausgewählt haben.

a • Über die Motorstromversorgung:



✓ Ihre Fernbedienung ist gekoppelt

b • Über den Motorkopf (sofern der Motor über eine PROG-Taste verfügt)



✓ Ihre Fernbedienung ist gekoppelt

3 MOTORDREHRICHTUNG UMKEHREN




✓ Die Drehrichtung wird geändert

4 FERNBEDIENUNG LÖSCHEN



Ihre Fernbedienung ist gelöscht

5 FERNBEDIENUNG HINZUFÜGEN / KOPIEREN

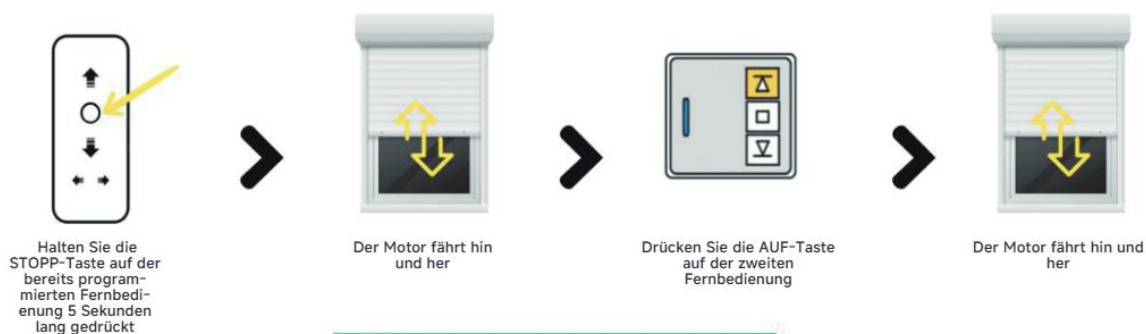

Ihre Fernbedienung ist gekoppelt

Wenn Sie eine allgemeine Fernbedienung hinzufügen möchten, kopieren Sie diese einfach so oft, wie Rollläden vorhanden sind



BEISPIEL: Sie haben drei Rollläden mit jeweils einer zugehörigen Fernbedienung. Besorgen Sie sich eine vierte Fernbedienung, die Sie als allgemeine Fernbedienung verwenden möchten, und kopieren Sie die Daten von jeder der drei Fernbedienungen auf die vierte.

(Eine Kopie löscht die vorherige nicht, sie werden zusammengefügt.)



Wenn Sie eine Mehrkanal-Fernbedienung verwenden, stellen Sie vor dem Kopieren sicher, dass Sie den gewünschten Kanal ausgewählt haben.

6 FERNBEDIENUNGSKANÄLE SPERREN

a • Kanäle sperren:



Positionieren Sie sich auf dem Kanal, auf dem Sie die Fernbedienung sperren möchten, z. B. Kanal 4 (so dass nur die Kanäle 1, 2, 3 und 4 aktiv sind).

Wenn Kanal 4 aktiviert ist, drücken Sie gleichzeitig die Tasten

STOPP + RECHTS, bis die Kanäle 1, 2, 3 und 4 gleichzeitig leuchten.



Sobald alle 4 Kanäle aktiviert sind, ist Ihre Fernbedienung auf 4 von 6 verfügbaren Kanälen gesperrt. Wenn Sie mit den Tasten links und rechts auf der Fernbedienung navigieren, sind die Kanäle 5 und 6 nicht mehr verfügbar.

b • Kanäle entsperren:



Positionieren Sie sich mit den Tasten links und rechts so, dass die Kanäle 1, 2, 3 und 4 gleichzeitig leuchten.

Wenn die Kanäle 1, 2, 3 und 4 eingeschaltet sind, drücken Sie gleichzeitig die Tasten STOPP + RECHTS, bis alle sechs Kanäle eingeschaltet sind.



Sobald alle sechs Kanäle eingeschaltet sind, stehen Ihnen alle sechs Kanäle wieder zur Verfügung. Navigieren Sie mit den Tasten links und rechts auf der Fernbedienung durch die verschiedenen Kanäle.

7 AUF DER RÜCKSEITE GIBT ES DIE FUNKTION DOPPELLEBENSWICHTIG



Dreimal kurz auf die rückseite des transmitters drücken, einmal für einen elektrojog



Gemäß der Richtlinie 2012/19/EU des Europäischen Parlaments und des Rates vom 4. Juli 2012 über Elektro- und Elektronik-Altgeräte (WEEE) dürfen Altgeräte, die mit einer durchgestrichenen Mülltonne gekennzeichnet sind, nicht zusammen mit anderen Abfällen entsorgt werden. Die Nutzer sind verpflichtet, ihre Altgeräte zur ordnungsgemäßen Entsorgung an einer dafür vorgesehenen Sammelstelle abzugeben. Die Kennzeichnung bedeutet gleichzeitig, dass das Gerät nach dem 13. August 2005 in Verkehr gebracht wurde. Diese gesetzlichen Verpflichtungen wurden eingeführt, um die Abfallmenge aus Elektro- und Elektronik-Altgeräten zu reduzieren und eine angemessene Sammlung, Verwertung und Wiederverwertung zu gewährleisten. Die Geräte enthalten keine gefährlichen Komponenten, die sich besonders negativ auf Umwelt und Gesundheit auswirken könnten.



A-OK erklärt hiermit, dass das in diesen Anweisungen beschriebene Laufwerk, wenn es für eine Eingangsspannung von 3V gekennzeichnet ist und entsprechend diesen Anweisungen verwendet wird, den grundlegenden Anforderungen der Richtlinie 2014/53/EU entspricht. Eine Konformitätserklärung, die die verwendeten Standards und Spezifikationen im Detail aufführt und alle Angaben zur Identifizierung des Laufwerks sowie den Namen und die Adresse der Person(en), die berechtigt sind, die technischen Unterlagen zu erstellen und die Erklärung zu erstellen, einschließlich des Ortes und Datums der Ausstellung, kann bei der Kundendienstabteilung des Hauptsitzes von A-OK unter der Nummer 0752-5717888 angefordert werden.